

**FOR B Model:** Now place the tent's reverse side on the Trampoline and determine which direction you want the door to face. The screened door is "L" shaped with zippers on the inside and outside, this will be your tent access point. Please make sure that there are 6 or 8 or 10 sleeves which divide the whole tent into 6 or 8 or 10 parts of the same area and the sleeves are up against the top frame. Put the CONNECTOR in the center of Tent. Using the band fix it. (see figure 5) Now slide one assembled pole into the sleeve of the tent, do not force the pole(s) through the sleeve(s), you have to gather tent fabric together to ease the pole through the sleeve. Repeat with the other poles into the other sleeves

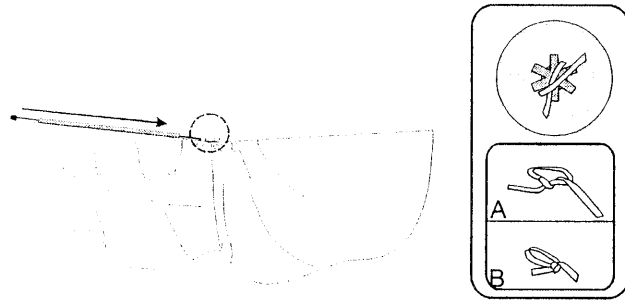


FIGURE 5

**STEP 5:**

**FOR A AND B Model:** Overturn the tent to the right side, then cover the trampoline with safety net from top to bottom.

Using the band fix on the each safety net pole. Please see the figure 6.

It is recommended that three or four adults assemble this step together.

Please note, don't use ladder in the trampoliner lean against the enclosure pole and net.

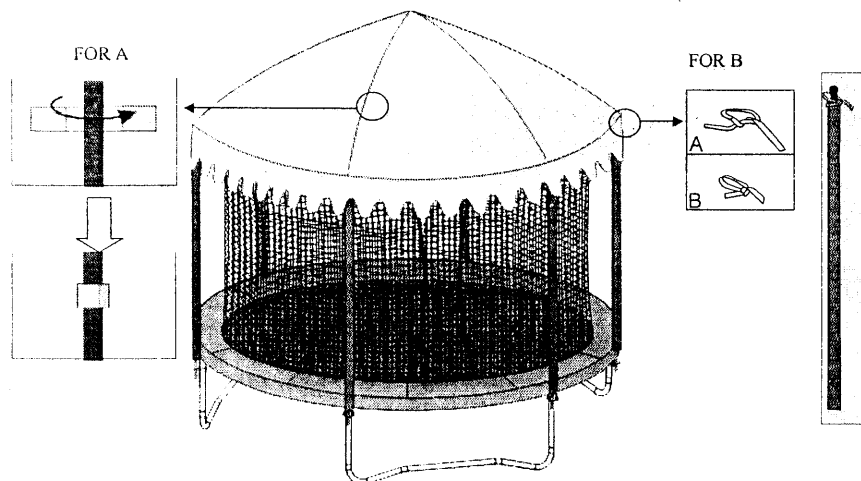


FIGURE 6

## HOW TO DISASSEMBLE AND STORE THE TRAMPOLINE NEW TENT

Prolonged exposure to the sun and elements (especially UV rays) will shorten the life of the tent fabric. For longer tent life, use a trampoline cover to protect it and the trampoline from exposure during short periods of non-use. Remove the tent from the trampoline during bad weather or during long periods of non-use. Once removed, it should be stored in a clean dry place. (We recommend that you retain the tent box to store your tent during long periods of non-use).

### To remove the tent from the trampoline

Make sure the tent is dry before removing and storing. Reverse the order of the basic assembly process. Store the tent in a safe, dry location. Once the tent is stored, remove all items from the trampoline mat. Make sure the mat is clean and that it has no tears or holes.

## TRAMPOLINE NEW TENTS SAFETY INFORMATION

### Need for TRAMPOLINE NEW TENT Safety

A TRAMPOLINE NEW TENT is a recreational product. It is designed to be installed on the frame of a standard octagon or round trampoline 6, 7, 8, 9, 10, 11, 12, 13, 14 or 15 feet in diameter (depending on the model of the tent purchased). The following information identifies important safety precautions. Some of these precautions apply to all kinds of tents and some are unique to this TRAMPOLINE NEW TENT. The list is not all-inclusive.

### Assemble the Tent Safely

Detailed step-by-step instructions in this instruction manual describe how to assemble the tent. Adults, not children, must assemble the tent, wear work gloves to protect your hands from pinch points during assembly. When you assemble the tent, the shock-corded fiberglass poles will be under some tension to keep the proper form of the tent. Keep children away from the TRAMPOLINE NEW TENT while it is being assembled, and do not allow them to play with tent parts during assembly.

To prevent pinches and cuts during tent use, the frame pad must be installed on the trampoline. The frame pad must be installed prior to erecting the tent. The frame pad reduces the chance of injury from accidental contact with the springs and frame.

### Use the Tent Safely

Adult supervision of children using the tent is recommended at all times.

Adults must pay attention to :

- \*The articles that children bring into the tent
- \*Children's activities inside the tent
- \*Conditions inside the tent when children are using it
- \*The way children get into and out of the tent

### Additional details of safe tent use are described below:

Keep all fires and flames (including grills and barbecues) away from the tent, no fires or other ignition sources should be permitted in, under or near the tent. Examples of these include cigarettes, lighters, matches, and lighted candles. In addition lanterns (propane, butane, kerosene, gasoline), catalytic heaters, canned-heating units, and similar heating or lighting units should not be used.

### Carbon monoxide poisoning hazard associated with tents:

Just as with normal tents, using heaters, grills and other such products inside the TRAMPOLINE NEW TENT pose a risk of carbon monoxide poisoning. Carbon monoxide is odorless and colorless. It is produced as oxygen levels drop during combustion from a fire or other heat sources in an area that has insufficient ventilation. The carbon monoxide becomes trapped inside a closed tent.