


TP804P Knightswood Single Wooden Swing Frame
TP802P Knightswood Double Wooden Swing Frame
TP803P Knightswood Triple Wooden Swing Frame
TP825P Knightswood Double Wooden Swing Frame & Extension
TP881P Eagle Wooden Swing Set





Instructions for assembly, maintenance and safe use.
 Please retain for future reference.

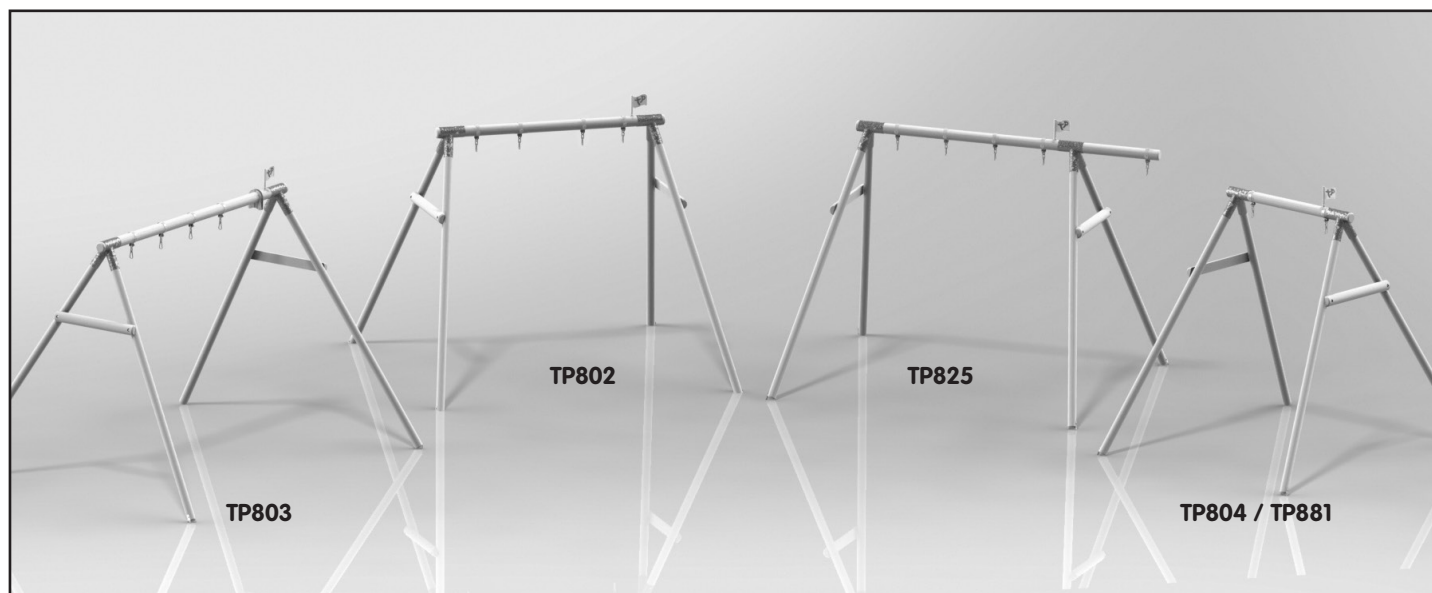

! WARNING!

THIS PRODUCT CONTAINS SMALL PARTS AND IS NOT SUITABLE FOR CHILDREN UNDER 36 MONTHS.
 CONTAINS SMALL PARTS. CHOKING HAZARD.
 ONLY FOR DOMESTIC USE. FOR OUTDOOR USE.
 TOY MUST BE ASSEMBLED BY AN ADULT BEFORE USE.
 ADULT SUPERVISION IS REQUIRED
 CHILDREN MUST NOT USE THE EQUIPMENT UNTIL PROPERLY INSTALLED.
 REMOVE ALL PACKAGING BEFORE GIVING TO YOUR CHILDREN.
 THIS PRODUCT IS INTENDED FOR USE BY CHILDREN FROM AGES 3 TO 12 YEARS.
 ANCHORS THAT ARE SUPPLIED WITH THIS PRODUCT MUST BE FITTED BEFORE USE.
 SINGLE SWING FRAME - MAXIMUM COMBINED USER WEIGHT 100KGS
 DOUBLE & TRIPLE SWING FRAMES - MAXIMUM COMBINED USER WEIGHT 200KGS

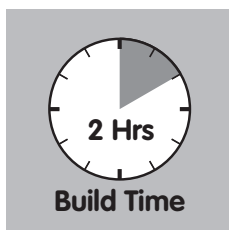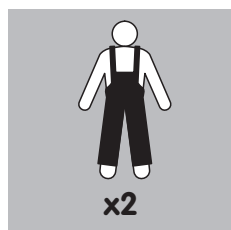


Robovision Ltd t/a TP Toys
 Unit 11, Enterprise Way, Flitwick, Bedfordshire, MK45 5BX England
www.tptoys.com

Important advice for assembly, maintenance and safe use


1. Toys must be assembled by an adult before use exactly in accordance with the instructions.
2. Check all parts are present before you start to assemble the product.
3. Place small parts on a tray or similar, to ensure they are not lost.
4. If any parts are missing do not use the product until the replacement parts are fitted.
5. Remove all packaging before giving to your children or allowing them to play with this product.
6. Ensure your product is sited on level ground. Failure to do this may put additional stress on connections and joints and in time could cause them to fail.
7. Ensure your product is located on a soft impact surface like grass. Never locate your product on hard surfaces like concrete or asphalt.
8. Children must not use this product until properly installed.
9. Adult supervision is required at all times to ensure children play safely. Ensure children's clothing is appropriate for the play activity.
10. Equipment should be checked by an adult at the beginning of each season and at regular intervals during the usage season to ensure it is safe.
11. Pay special attention to all connections and fastenings.
12. Parts may need to be replaced if they show signs of wear and tear. Replace any defective parts in accordance with these instructions.
13. Any changes to this toy, e.g. changing or adding an accessory, must be done in accordance with our instructions. Failure to do this will render your guarantee null and void and may make your product unsafe.
14. The age recommendation for this product is clearly stated on the packaging and these instructions. Please adhere to it at all times.
15. When you dispose of this equipment please do so responsibly.


Safe play free space area

The safe play area refers to the zone extending 200cm around the toys on all sides and 250cm above the toy. The safe play area must be free from all obstacles.

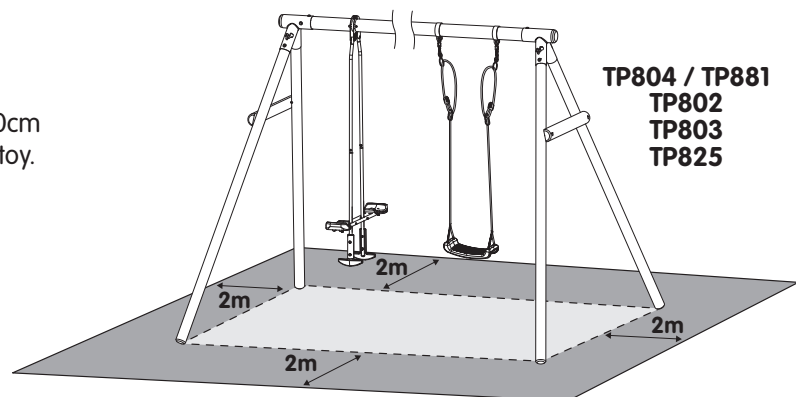

Dimensions

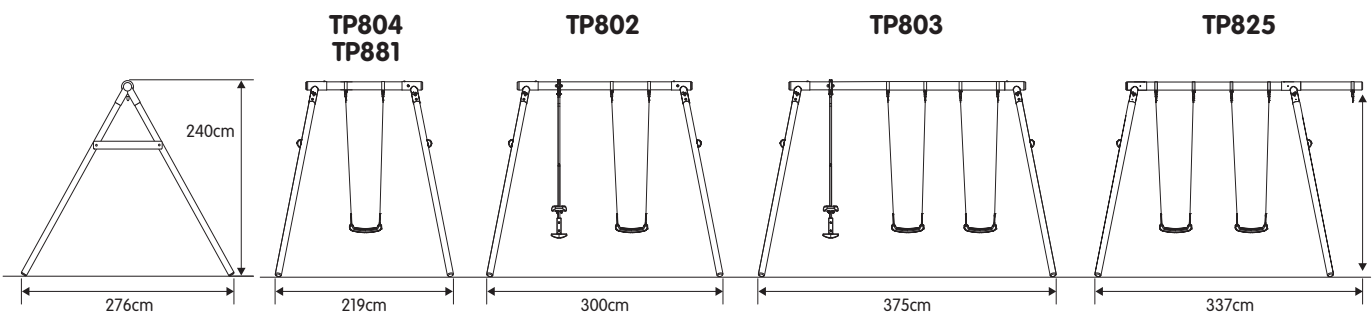

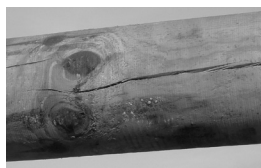

Know Your TP Round Wood.

Timber is a very popular choice for active outdoor toys. For reasons of affordability and the environment, all wood playset manufacturers use softwood rather than hardwood. Each piece of timber is unique, bearing its own knots, cracks and variations in colour.

Round timbers tend to come from younger smaller trees and are complete tree poles, stripped of any bark and other rough materials but subject to no further processing apart from the application of a suitable environmentally friendly preservative.

Our round wood frames are rustic in appearance. The heartwood that they are made from naturally has cracks and splits. These cracks will change over time due to atmospheric conditions. When wet, the wood will take in water, swell and the cracks will close up (not disappear), when dry the wood contracts and the cracks will open up.


Whilst this can sometimes seem alarming, the round timber frames are designed and dimensioned to ensure these natural characteristics do not have an impact upon the structural integrity of the frame. All of our wooden play frames are rigorously tested by an independent test house and fully comply with the relevant toy safety regulations.

Because of the natural characteristics of such wood products, it is vital that parents check their play frame regularly to identify any splintering or lifting of the surface layers of the wood or any exposure of rough wood due to changes in cracks and splits. Affected areas must be rubbed down using coarse sandpaper to restore a smooth, safe surface.


Very occasionally these characteristics can develop to a point where replacing the pole may be required. This can be if a crack is in a particular position or if a crack exceeds certain parameters. Examples of this are:

- Where cracks open up in excess of 5mm in width.
- Where cracks of a significant width extend over half the total length of the timber.
- Where cracks run through fixing points.

Tools - You will need:

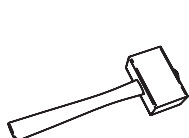

Mallet



Tape Measure




Step Ladder



Spirit Level



5mm
Drill Bit



Screwdriver



Spanner
10 & 13mm



Sockets
10 & 13mm



Wrench



Pozi #2
Pozi #3




Combi Drill

Also Required:



Not Supplied



Shovel

TP881P Eagle Wooden Swing Set

801

MW0200 2700mm **x2**



MW0202 900mm **x2**



804 - 1 / 881 - 1

MW1500 **x1**



MW0200 2700mm **x2**



800S

Please note: There may be some fixings left over after the assembly build.

Fixings - SP0075



40mm FA8380
x6




4 x 16mm FA4527
x2



M8 x 25mm
FA8440
x16





PM1968
x1



70mm FA8439
x16

PM1007
Flag **x1**

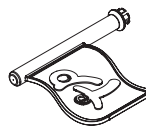

FB6051
x2



PR5069
x4




PR7757
TP804 **x2**
TP881 **x2**

1


TP804P Knightswood Single Wooden Swing Frame

TP881P Eagle Wooden Swing Set

MW1500 x1




PR7757
TP804 x2
TP881 x2

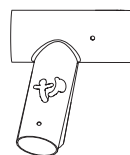


FB6038 x2

ASSEMBLY TIP

Make sure you thread the metal collars (PR7757) onto your top bar before the securing the brackets to each end of the wood

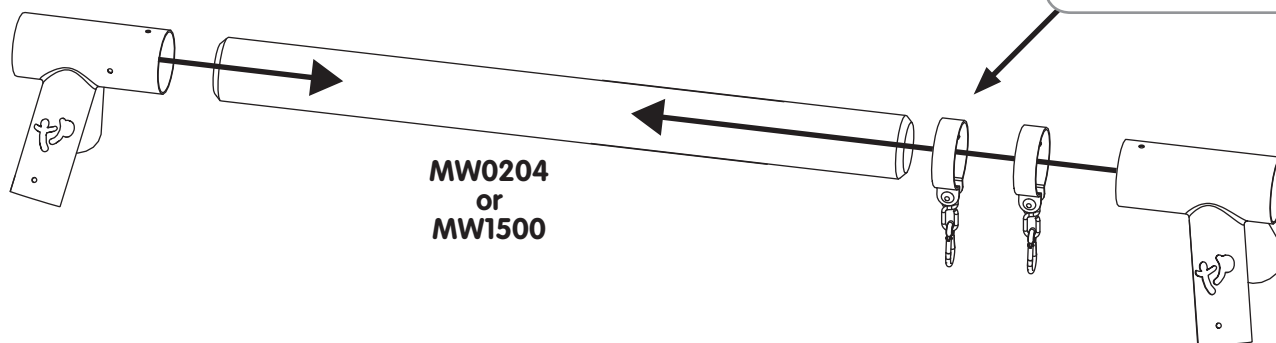



2



70mm FA8439
x4




M8 x25mm
FA8440
x4

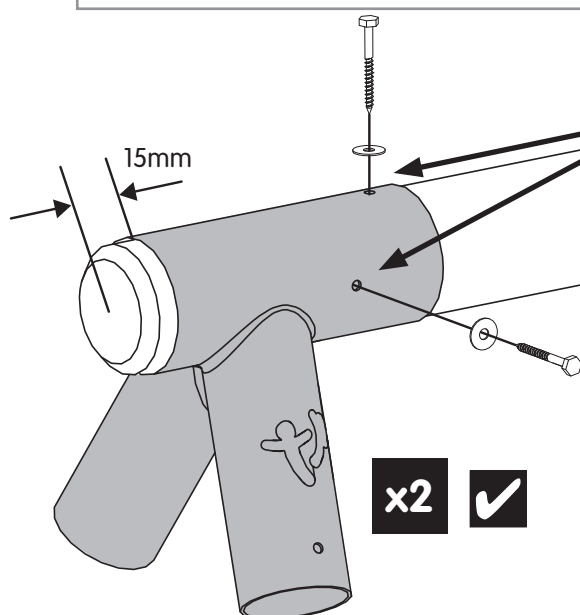


5mm

x2

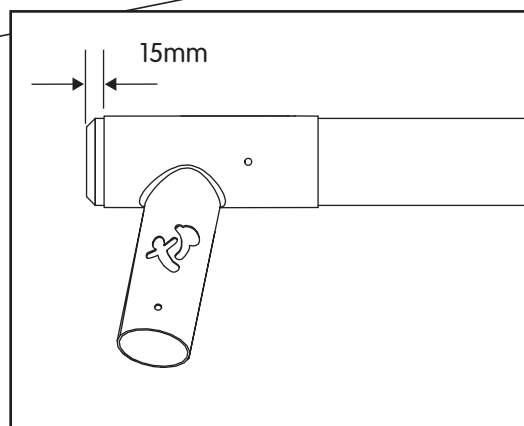

3

Locate your swing seats correctly:

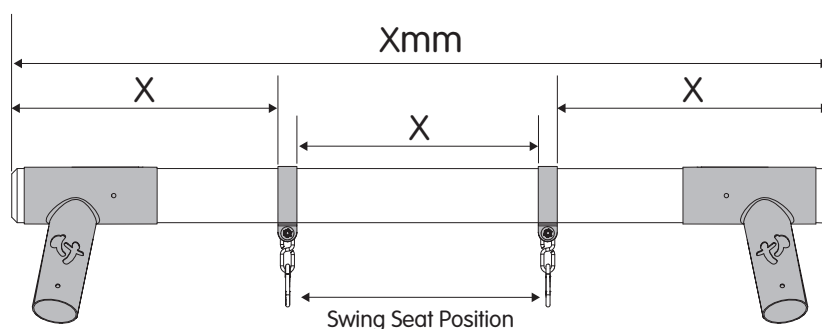

ASSEMBLY TIP

For correct spacing and fixing of your chosen swing accessories please go to page 12 stage 3.

801

MW0200 2700mm **x2**




MW0202 900mm **x2**



802 - 1

MW0203 2250mm **x1**



MW0200 2700mm **x2**



800D

Please note: There may be some fixings left over after the assembly build.


Fixings - SP0075



40mm FA8380
x6




4 x 16mm FA4527
x2



M8 x25mm
FA8440
x16





PM1968
x1



70mm FA8439
x16

PM1007
Flag **x1**

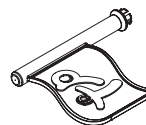

FB6051
x2



PR5069
x4



PR7757
TP802 **x4**


1

TP802 Knightswood Double Wooden Swing Frame

MW0203 2250mm x1



PR7757
TP802 x4

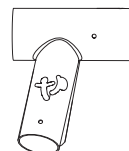

FB6038 x2

ASSEMBLY TIP


Make sure you thread the metal collars (PR7757) onto your top bar before the securing the brackets to each end of the wood



2


70mm FA8439
x4

M8 x25mm
FA8440
x4

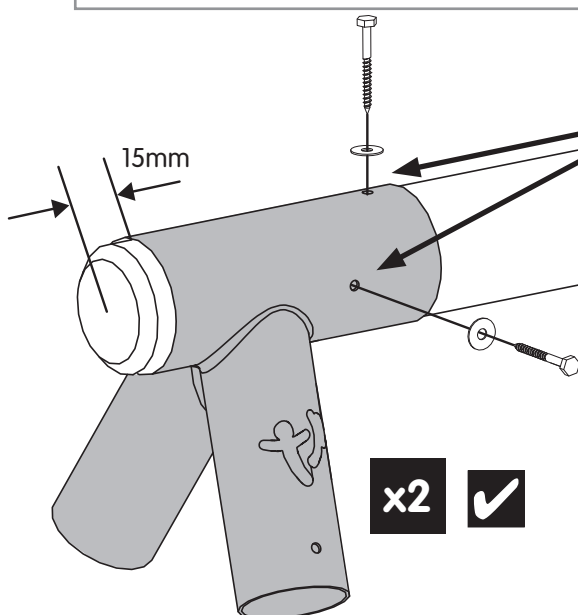


5mm

x2

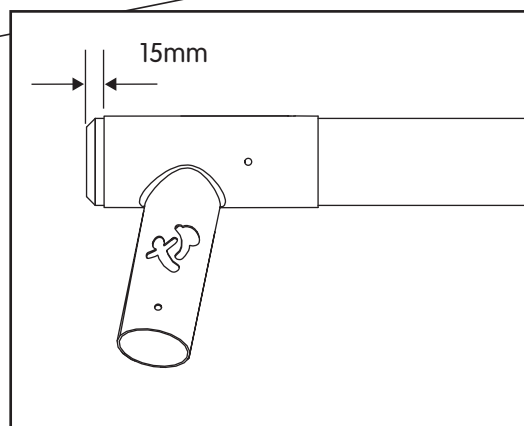

3

Locate your swing seats correctly:

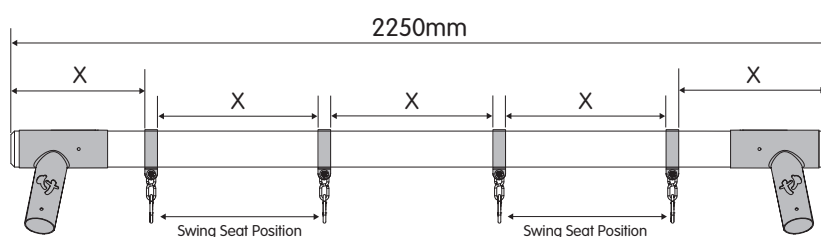

ASSEMBLY TIP


For correct spacing and fixing of your chosen swing accessories please go to page 13 stage 3.

801

MW0200 2700mm **x2**

MW0202 900mm **x2**

803 - 1

MW0201 3000mm **x1**

MW0200 2700mm **x2**

800T


Please note: There may be some fixings left over after the assembly build.



Fixings - SP0075

40mm FA8380
x6

4 x 16mm FA4527
x2

M8 x25mm
FA8440
x16

PM1968
x1

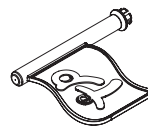70mm FA8439
x16

PM1007
Flag **x1**

FB6051
x2

PR5069
x4

PR7757
TP803 **x6**


1

TP803 Knightswood Triple Wooden Swing Frame

MW0201 3000mm x1




PR7757
TP803 x6

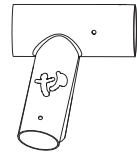

FB6038 x2

ASSEMBLY TIP


Make sure you thread the metal collars (PR7757) onto your top bar before the securing the brackets to each end of the wood

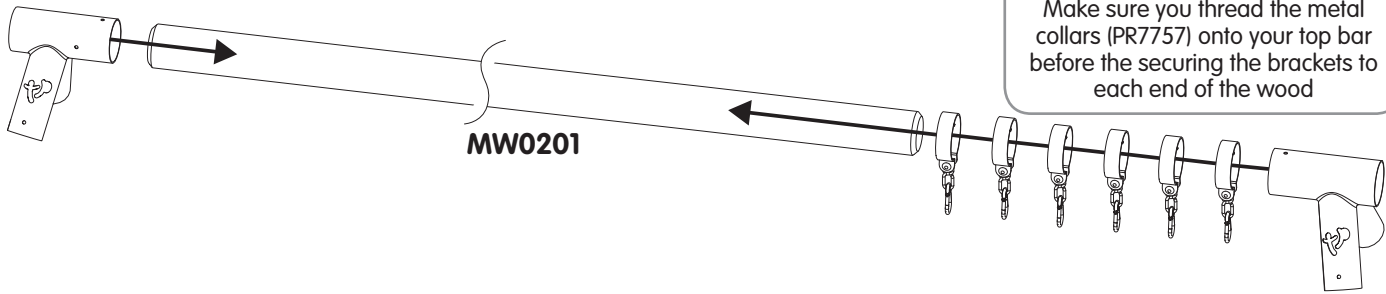

2


70mm FA8439
x4

M8 x25mm
FA8440
x4

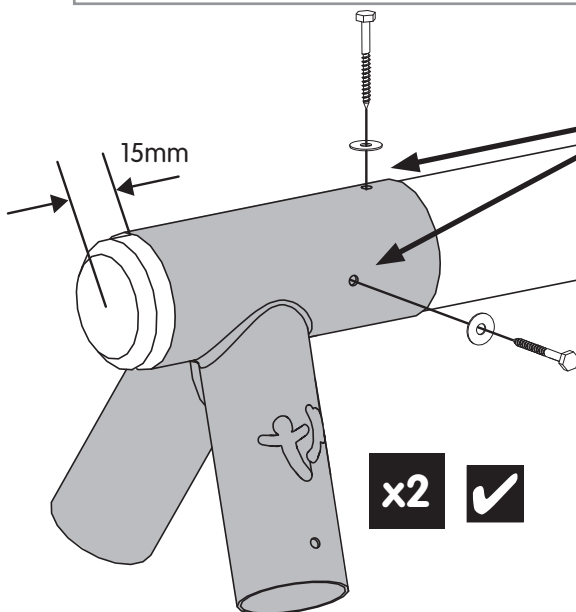


5mm

x2

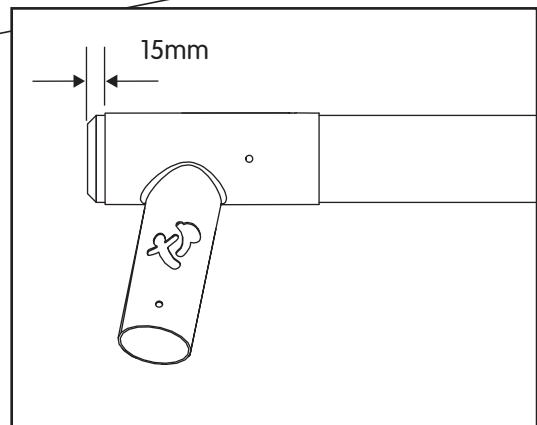

3

Locate your swing seats correctly:

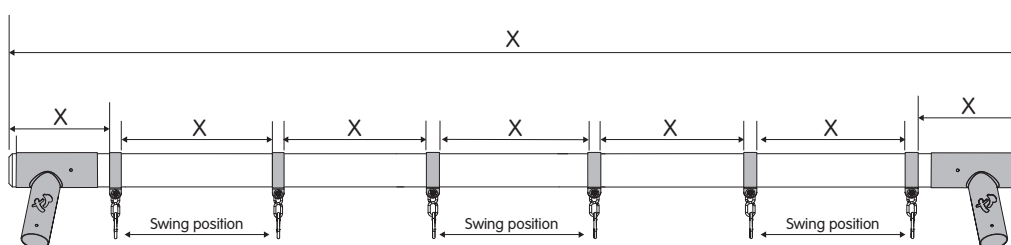

ASSEMBLY TIP

For correct spacing and fixing of your chosen swing accessories please go to page 14 stage 3.

801

MW0200 2700mm **x2**



MW0202 900mm **x2**



803 - 1

MW0201 3000mm **x1**



MW0200 2700mm **x2**



825-3

Please note: There may be some fixings left over after the assembly build.


Fixings - SP0075



40mm FA8380
x6




4 x 16mm FA4527
x2



M8 x 25mm
FA8440
x16





PM1968
x1



70mm FA8439
x16

PM1007
Flag **x1**

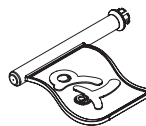

FB6051
x2



PR5069
x4



PR7757
TP825 **x5**


1

TP825 Knightswood Double Wooden Swing Frame & Extension

MW0201 3000mm x1




PR7757
TP825 x5

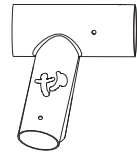

FB6038 x2

ASSEMBLY TIP


Make sure you thread the metal collars (PR7757) onto your top bar before the securing the brackets to each end of the wood

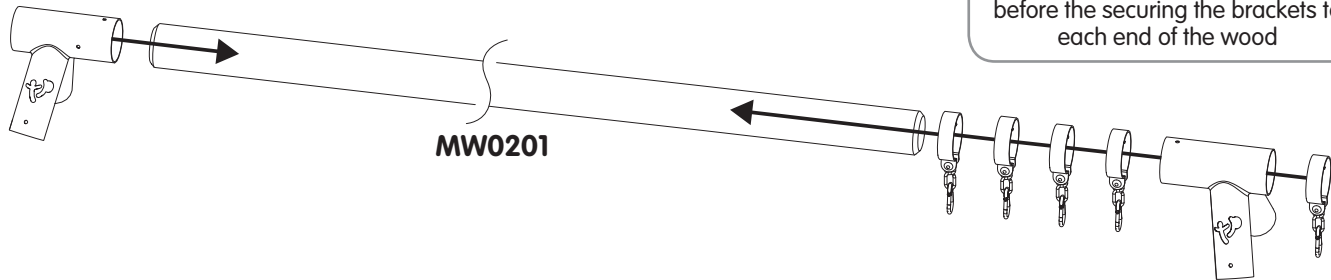



2

70mm FA8439
x4

M8 x25mm
FA8440
x4




5mm

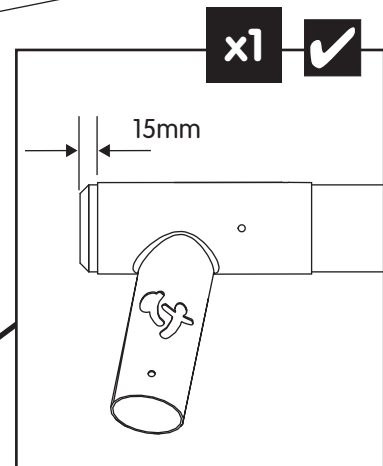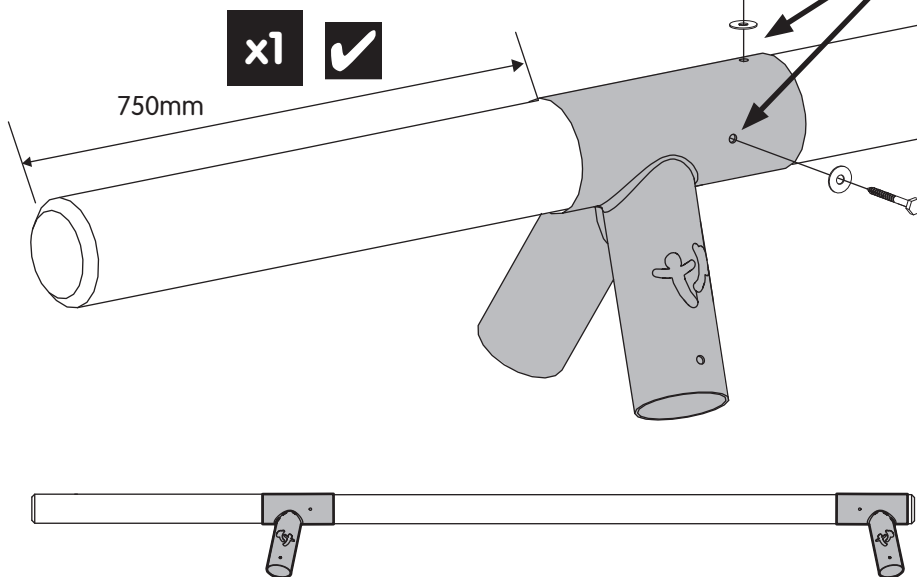

3

Locate your swing seats correctly:

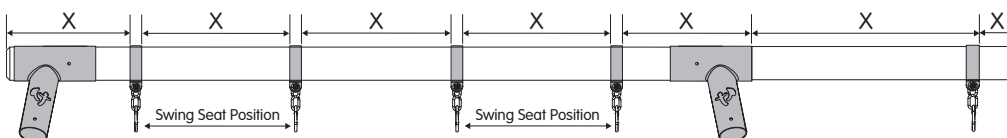

ASSEMBLY TIP

For correct spacing and fixing of your chosen swing accessories please go to page 15 stage 3.


SWING FRAME CONFIGURATIONS




IMPORTANT ASSEMBLY TIP

When attaching a swing accessory that requires 2 Duo Ride Brackets (TP784 or PR5070), fixing locations for these brackets will be the same as the Swing seat positions using collars.

Fixing positions using Collars (PR7757) or Duo Ride Brackets

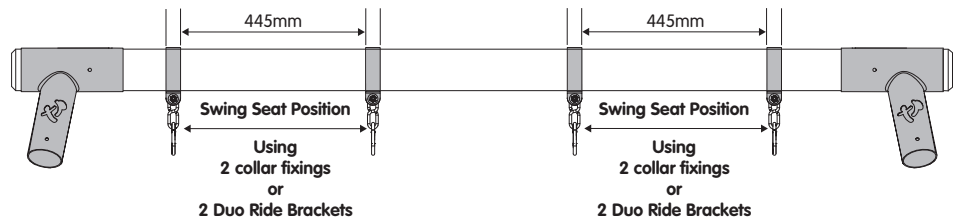

Duo Ride Brackets

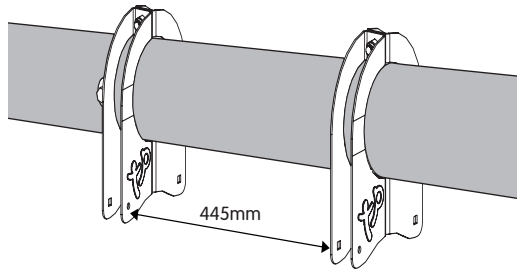


3

TP804P Knightswood Single Wooden Swing Frame


TP881P Eagle Wooden Swing Set

40mm
FA8380
TP804 x2
TP881 x2




With 1 single swing seat

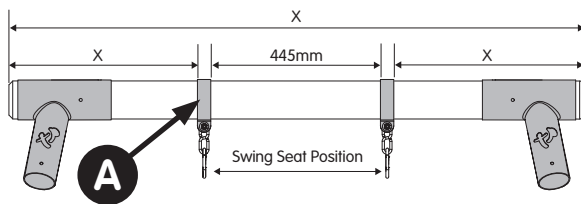

With 1 glide ride

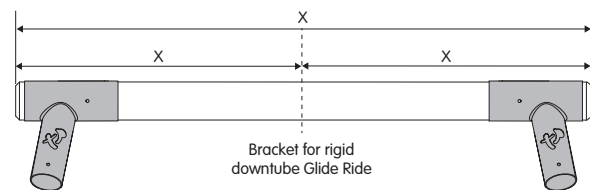


With 1 Nest Swing (85cm)

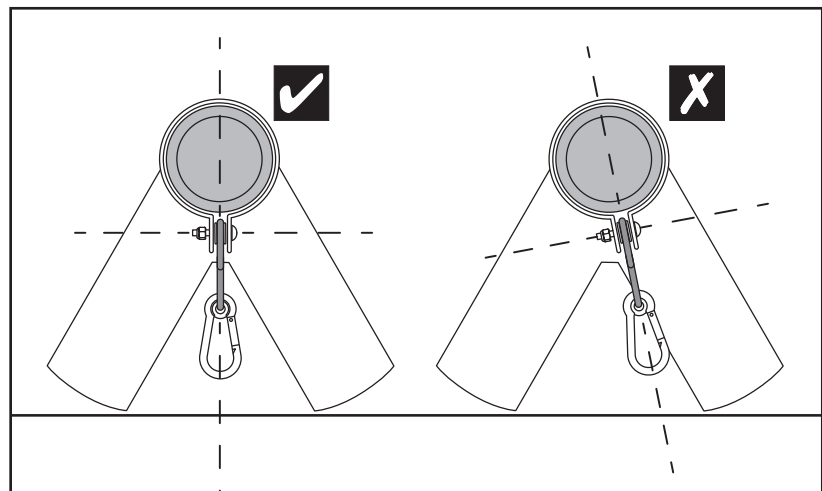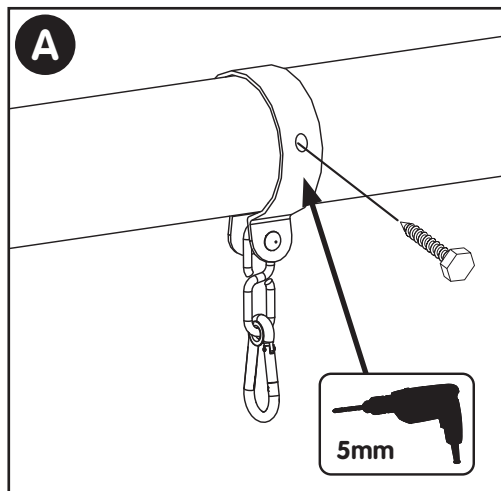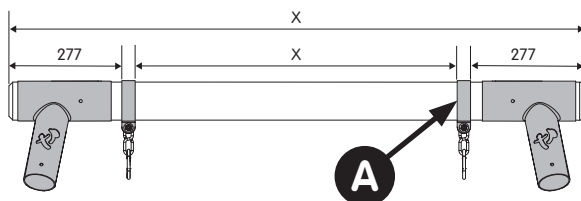


3

TP802 Knightswood Double Wooden Swing Frame




40mm
FA8380
TP804 x4


With 2 single swing seats

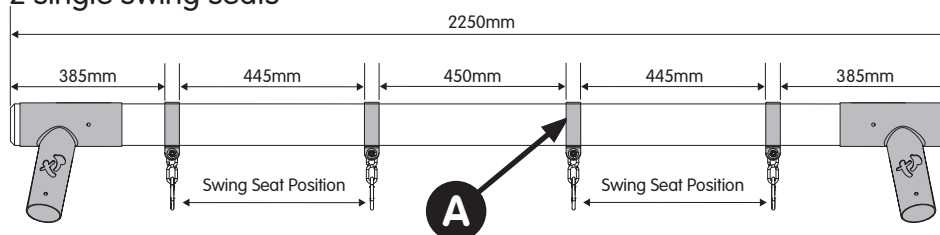


With 1 glide ride and 1 single swing seat

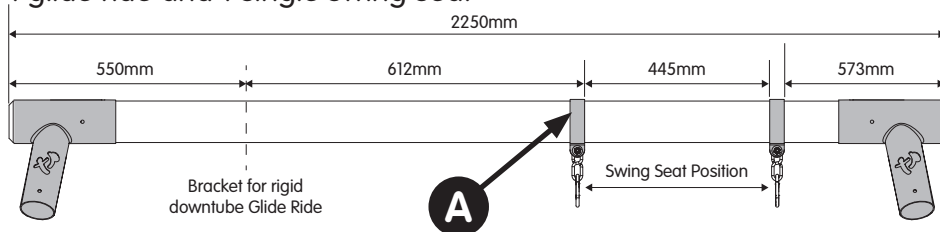




With 1 Nest Swing (120cm)

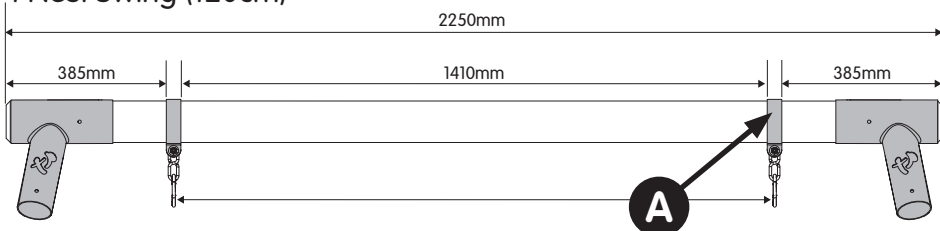

With 1 single swing seat and 1 single roped accessory

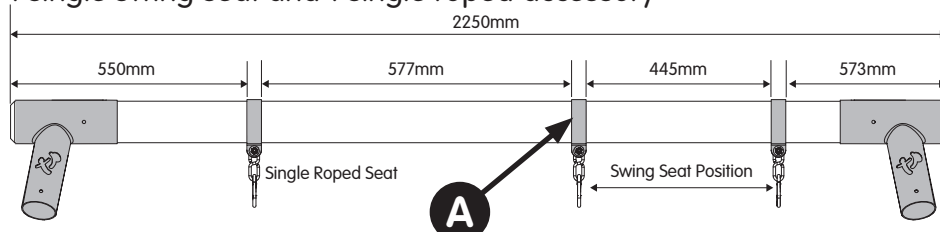


With 1 glide ride 1 single roped accessory

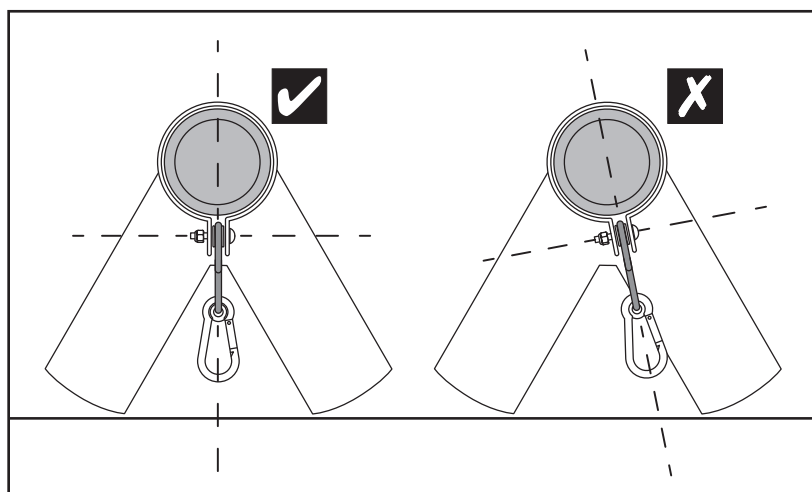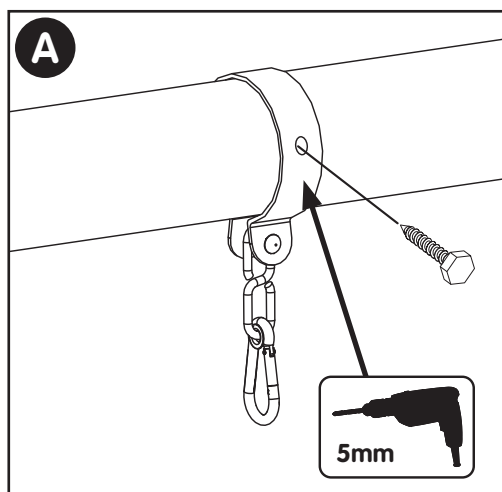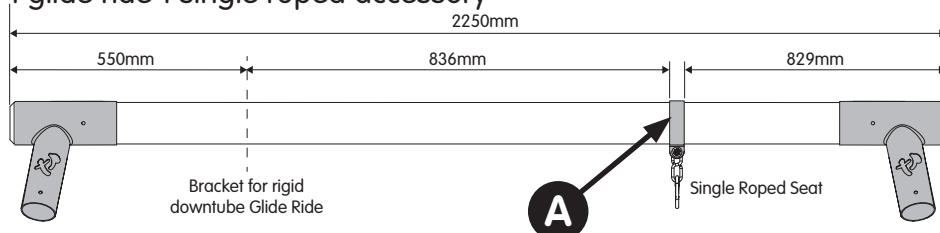




40mm
FA8380
TP803 x6


With three single swing seats

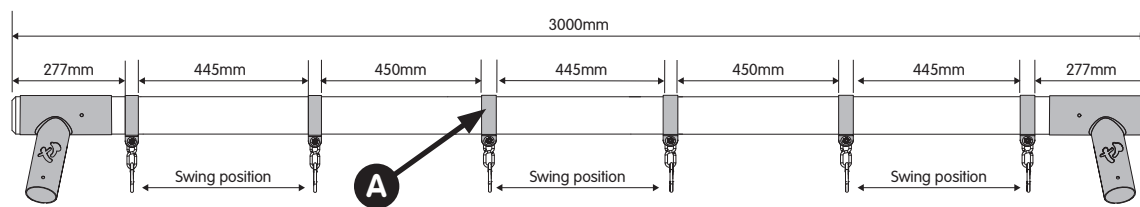




With 1 glide ride, 1 single swing and 1 single roped accessory

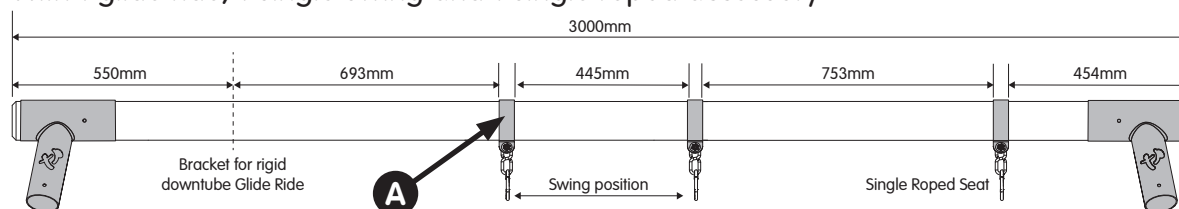

With 1 nest swing and 1 single swing seat

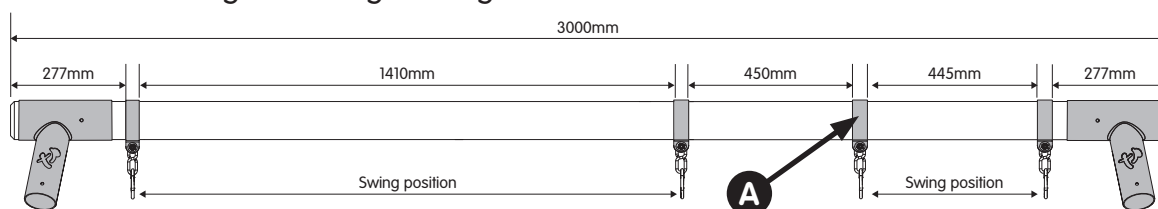


With 1 nest swing and 1 roped accessory

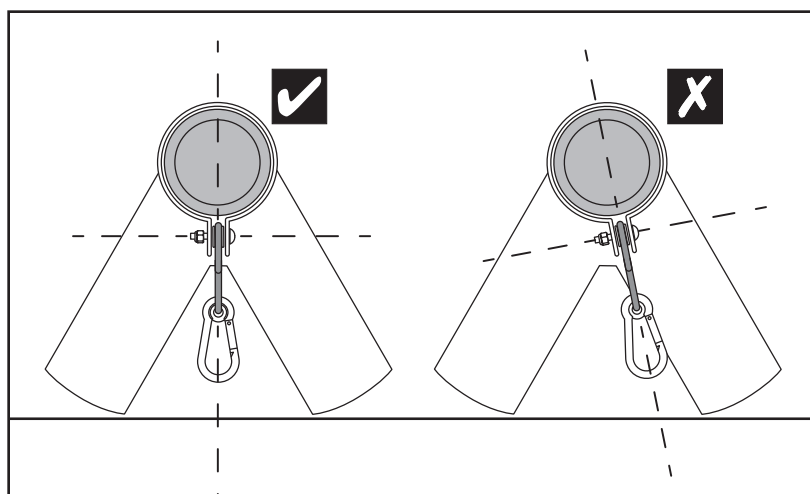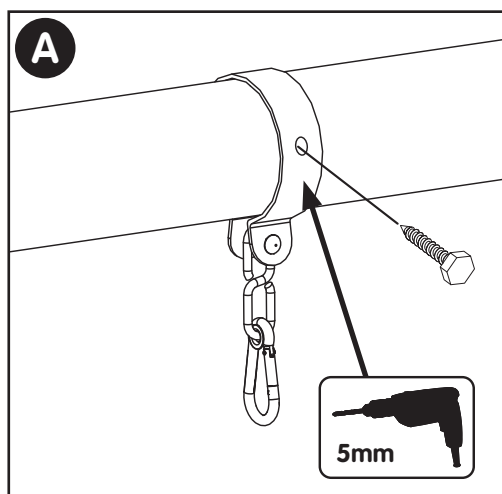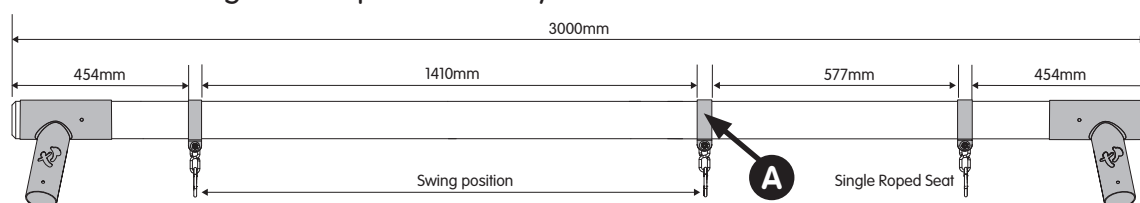




40mm
FA8380
TP825 x5




With 2 single swing seats and 1 single roped accessory

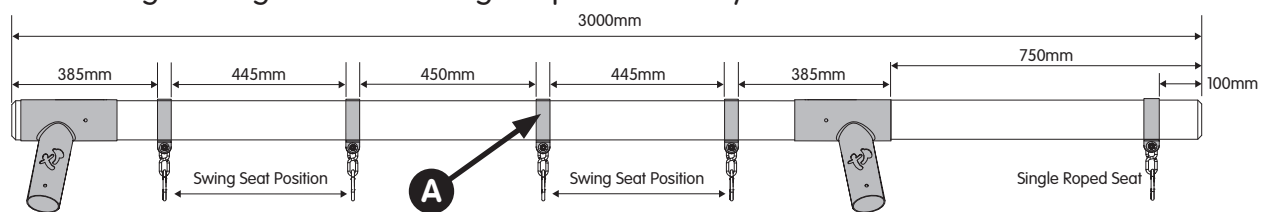

With 1 Nest swing seat and 1 single roped accessory

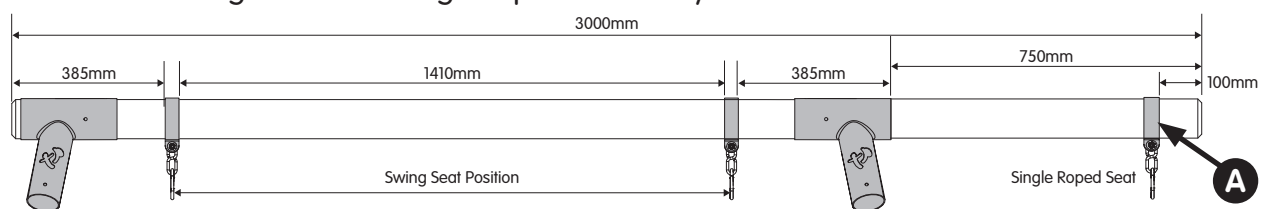


With 1 glide ride, 1 single swing seat and 1 single roped accessory

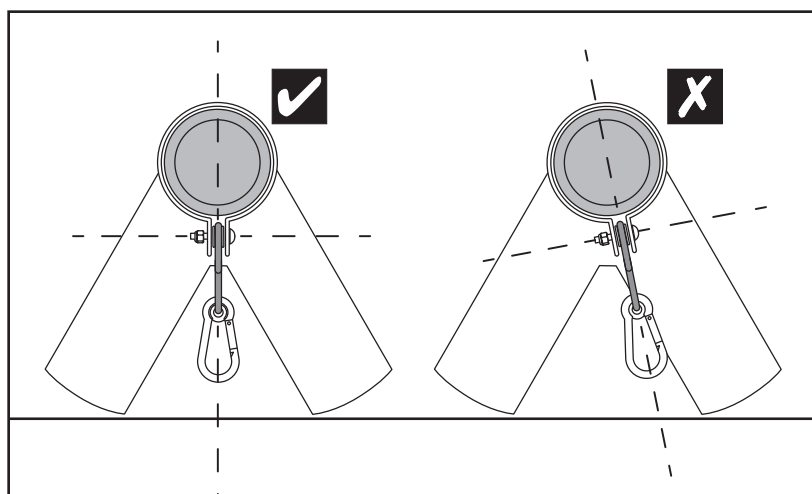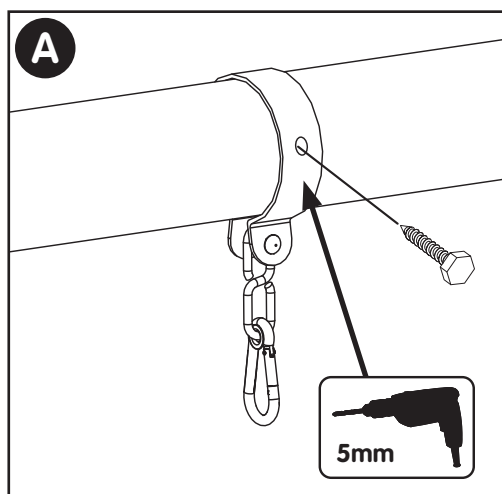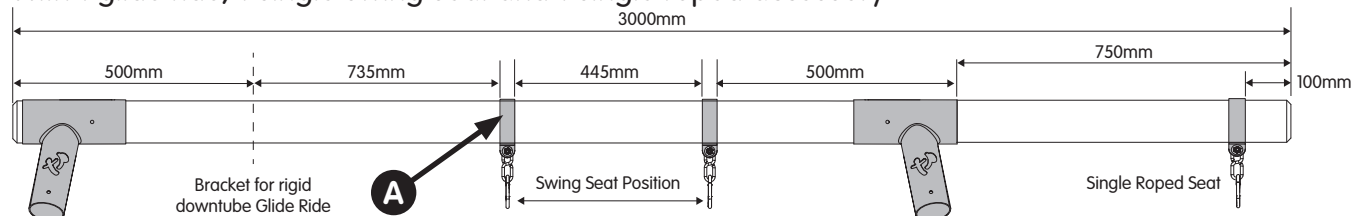

4



TP804 / TP802 / TP803 / TP825 / TP881

MW0200 2700mm x2

70mm FA8439
x2M8 x25mm
FA8440
x2



ASSEMBLY TIP

Generic view of Top Bar only.
Actual Top Bar will vary
depending on product purchased.

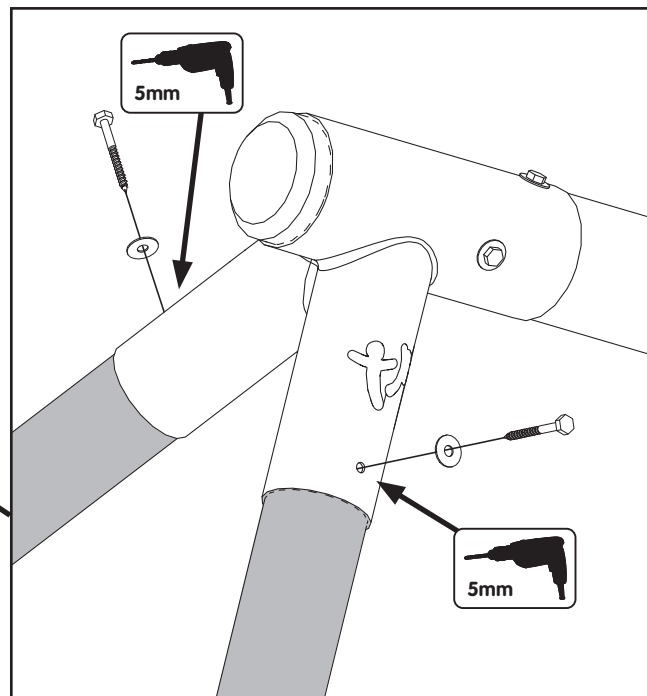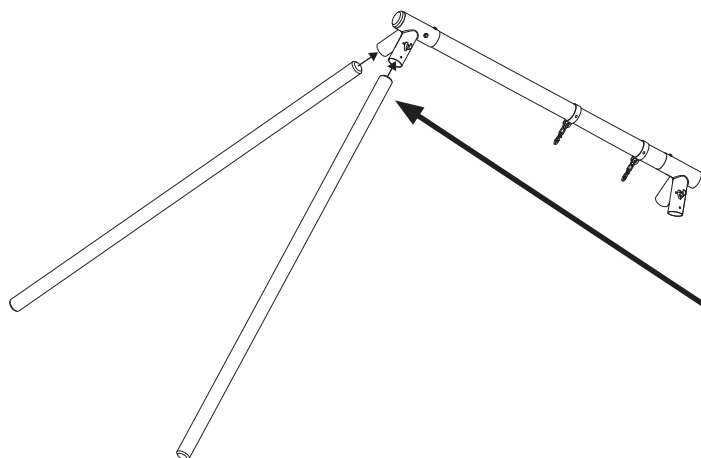

5


MW0200 2700mm x2

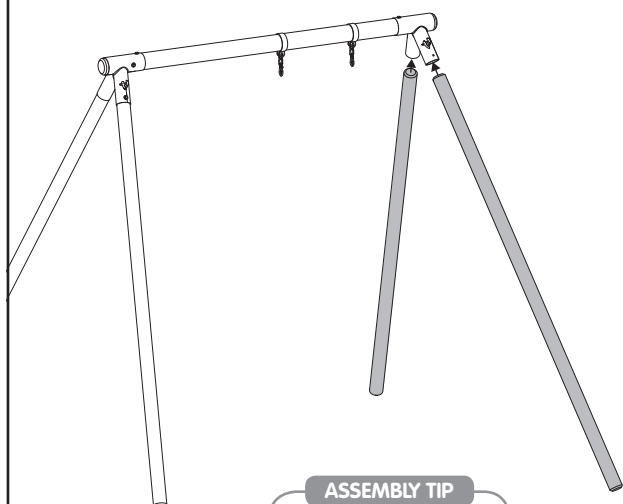70mm FA8439
x2M8 x25mm
FA8440
x2

ASSEMBLY TIP



Step
ladders
required.

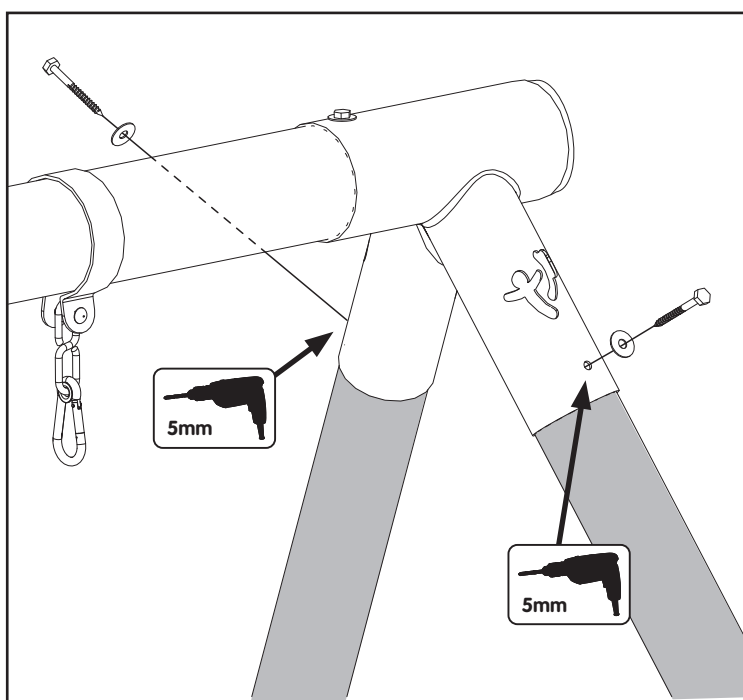



6

MW0202 900mm x2





70mm FA8439 x4

M8 x25mm
FA8440
x4

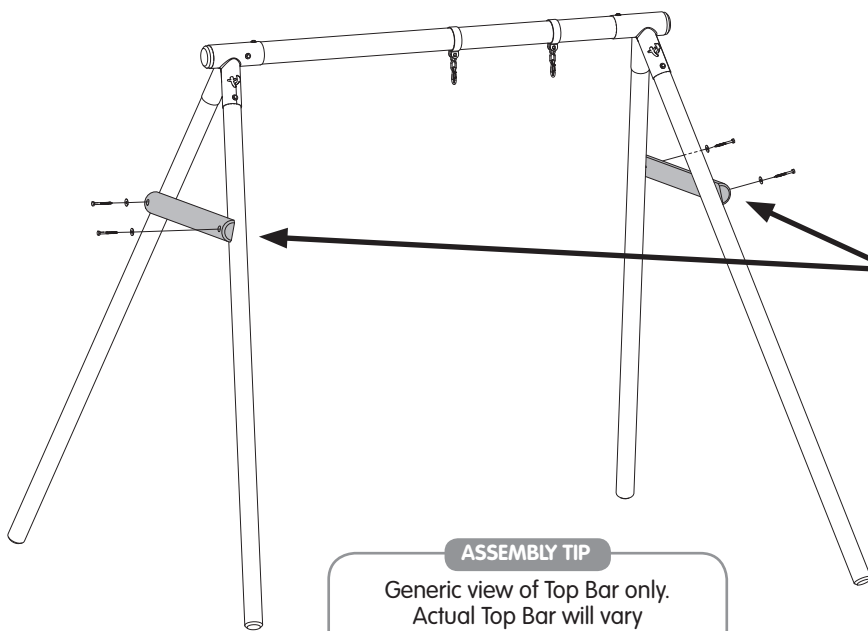

ASSEMBLY TIP
Generic view of Top Bar only.
Actual Top Bar will vary
depending on product purchased.

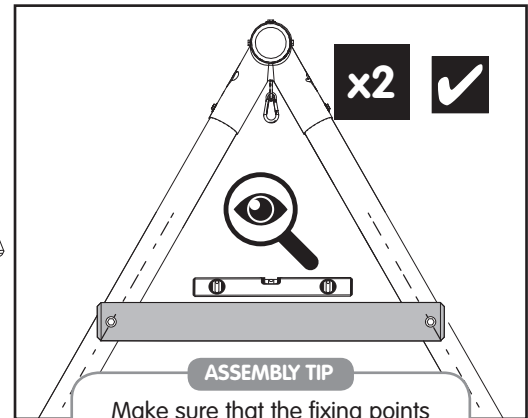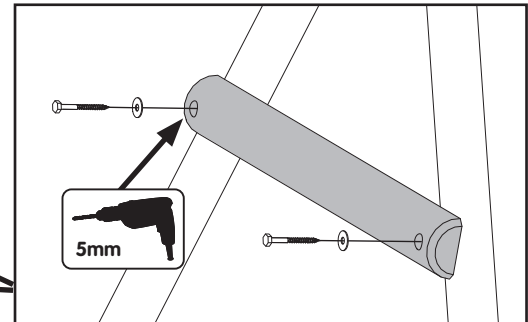

ASSEMBLY TIP
Make sure that the fixing points
are centred on the legs.

7


Attaching Swing Accessories




**IMPORTANT
ASSEMBLY TIP**

Glide Ride, Nest Swing & Pirate Boat need to be built before attaching to the Top Bar. Please refer to product instruction manuals supplied with these products.


TP940
Glide Ride

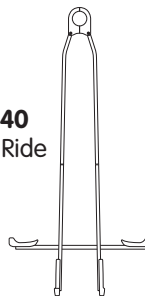

TP932
Nest Swing

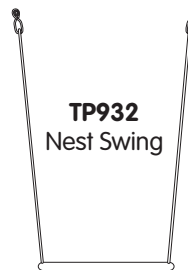


TP933
Pirate Boat

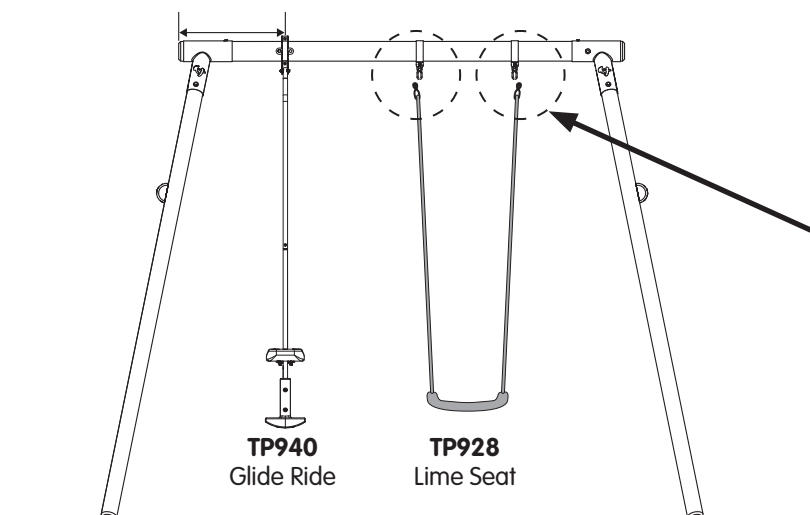

TP940
Glide Ride

TP928
Lime Seat


ASSEMBLY TIP
Step ladders required.

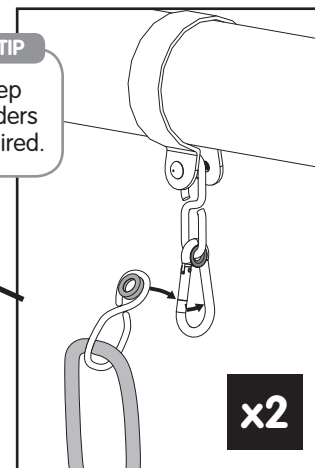

x2

8

Swing seat height adjustment

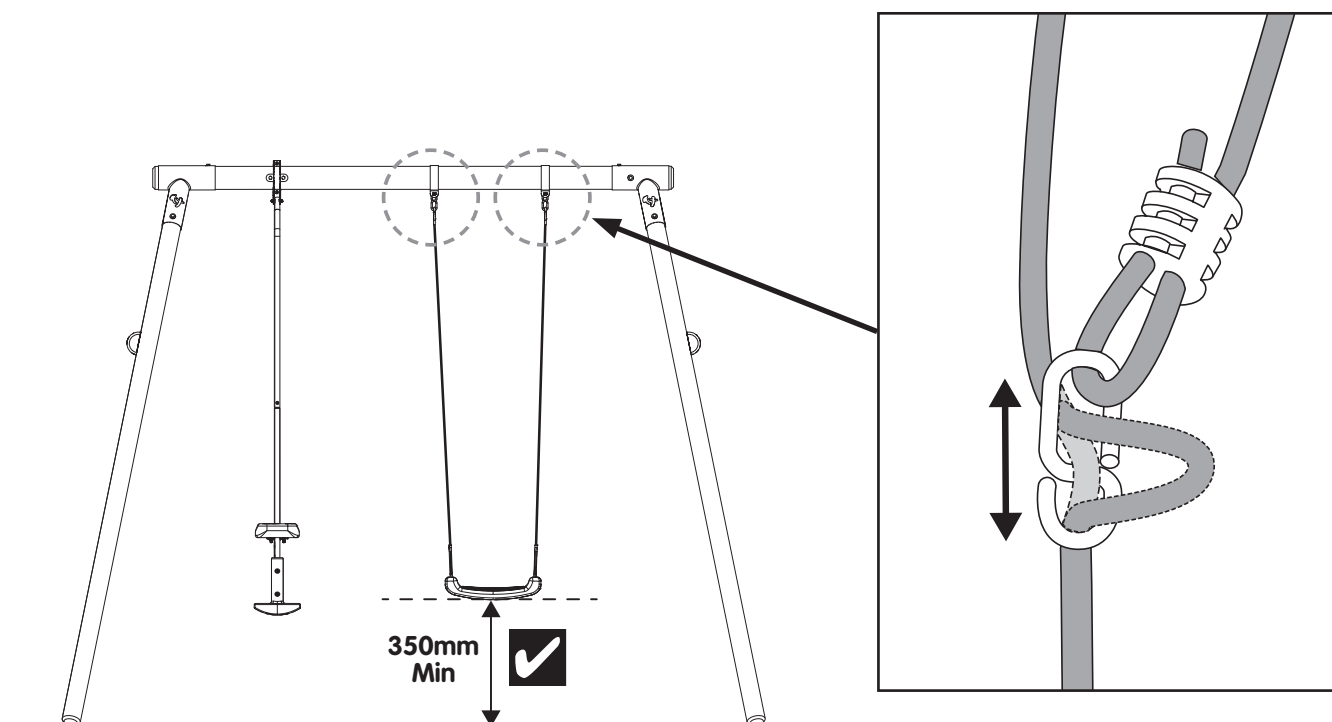


9







PM1968
x1

PM1007
x1

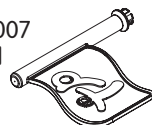

4 x 16mm x2
FA4527




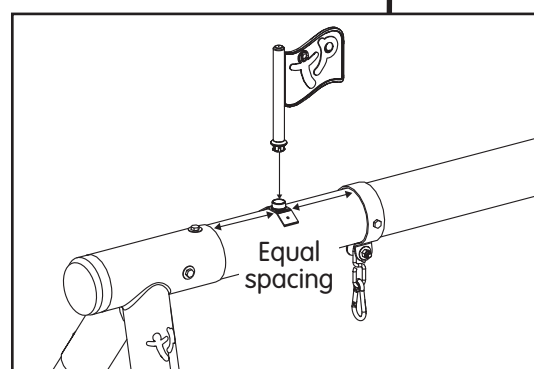
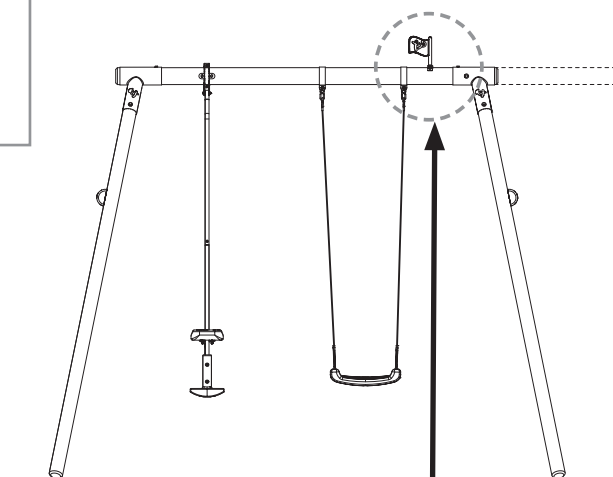
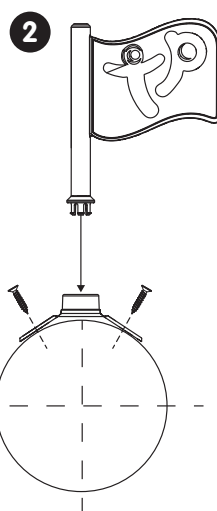
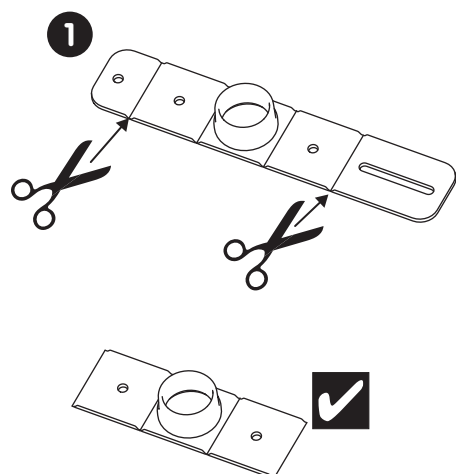


10

70mm FA8439
x4

PR5069
x4

M8 x25mm
FA8440
x4

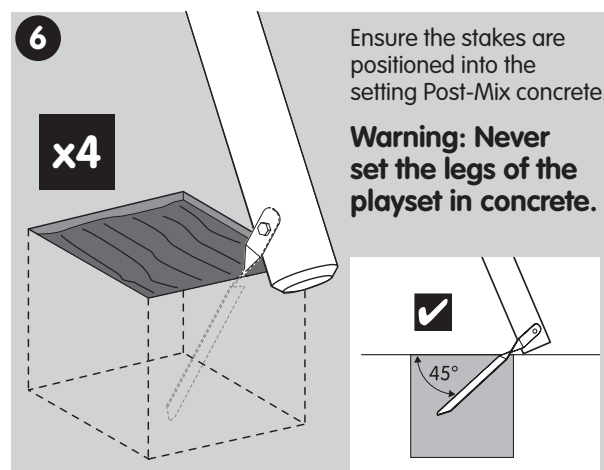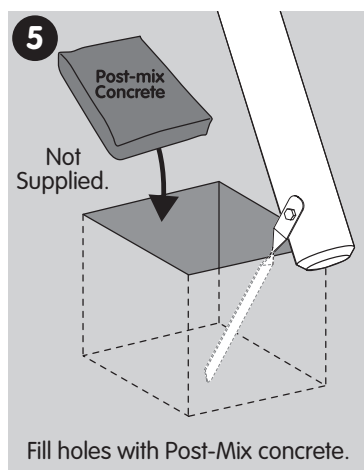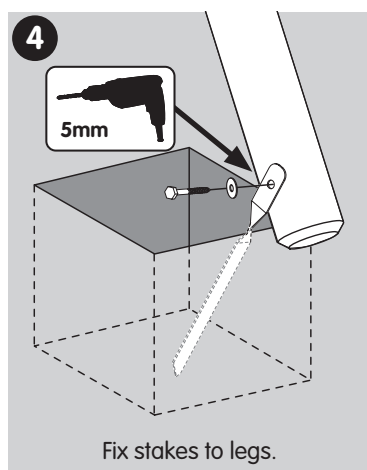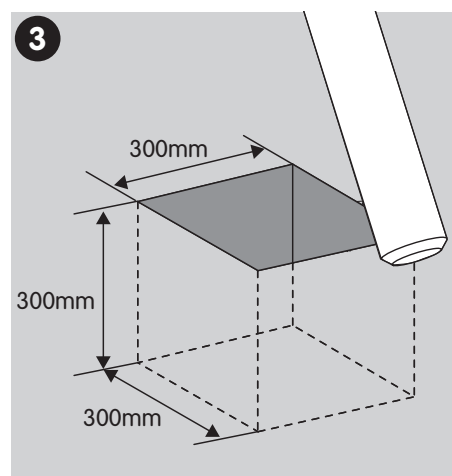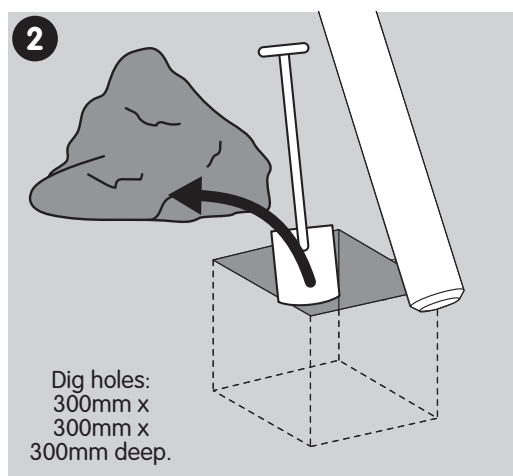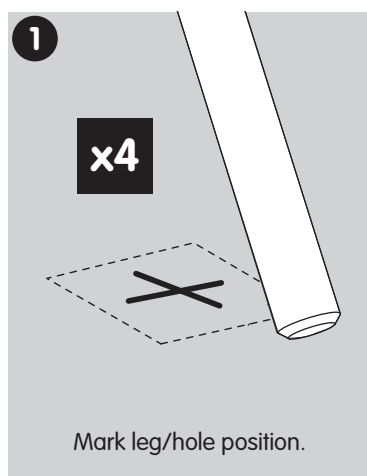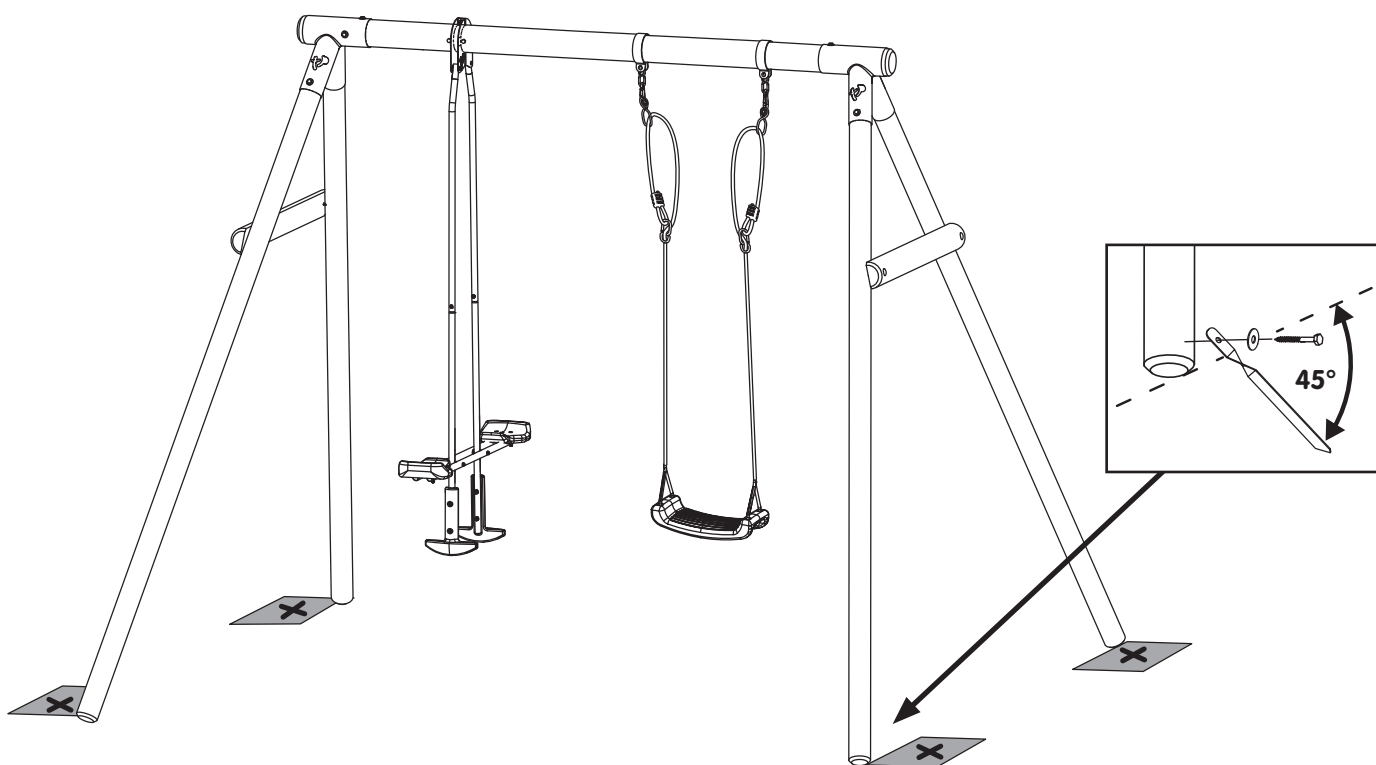



Thank you

Thank you for purchasing this product.

Please register your new product on line at tptoys.com

www.tptoys.com/customer/productregistration

Find out about the guarantee for this product,

visit **www.tptoys.com/customer/pages/guaranteeinformation**

For customer services and help with your product,

visit **www.tptoys.com/customer/help**

Your TP Guarantee Number/Product Batch No is

--